



The diagram illustrates the internal layout of the PC case. The components are labeled as follows:

- A:** Detasarea panourilor (Removing the panels)
- B:** Instalarea sursei (Installing the power supply)
- C:** Instalarea plăcii de baza (Installing the motherboard)
- D:** Ventilatoare și radiatoare suportate (Supported fans and radiators)
- E:** Instalarea HDD și SSD (Installing the HDD and SSD)
- F:** Instalarea VGA (Installing the VGA)
- G:** Ecran LCD și Panoul I/O (LCD Display and I/O panel)
- H:** Controller ARGB (ARGB controller)
- I:** Telecomanda (Remote control)


RO

- A: Detasarea panourilor
- B: Instalarea sursei
- C: Instalarea placii de baza
- D: Ventilatoare si radiatoare suportate
- E: Instalarea HDD si SSD
- F: Instalarea VGA
- G: Ecran LCD si Panoul I/O
- H: Controller ARGB
- I: Telecomanda

EN

- A: Removing the panels
- B: Installing the power supply
- C: Installing the motherboard
- D: Supported fans and radiators
- E: Installing the HDD and SSD
- F: Installing the VGA
- G: LCD Display and I/O panel
- H: ARGB controller
- I: Remote control

Accessories include / Included accessories			
1  Cable Tie x10	2  PSU Screws x6	3  Velcro cable ties x5	 Plastic Female Buckle x1
4  HDD Screws x8	5  MB Screws x18	6  Copper Pillar x3	

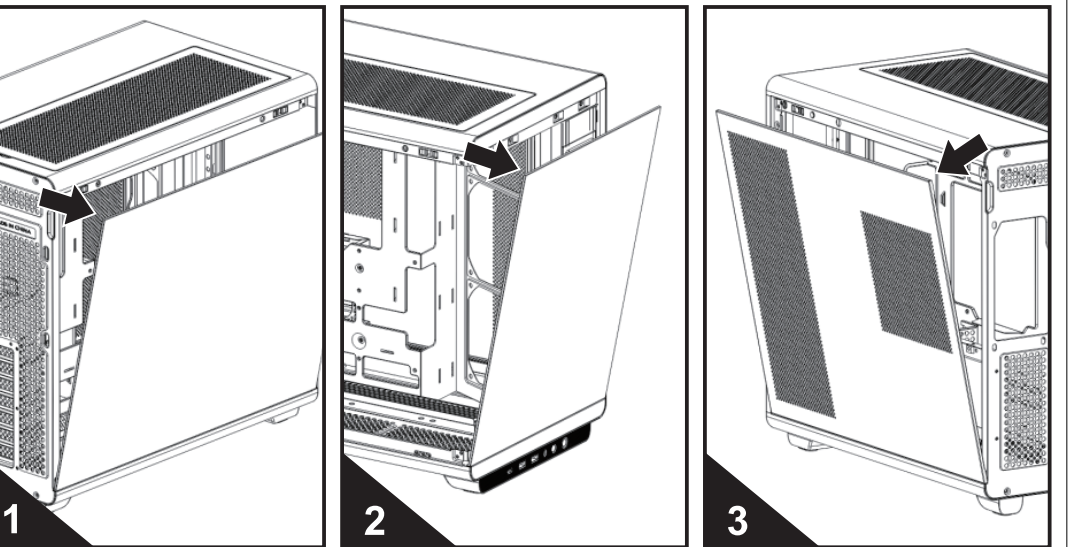


RO

1. Impinge panoul lateral din sticla securizata stanga spre exterior din coltul stanga sus, conform imaginii.
2. Impinge panoul frontal din sticla securizata spre exterior din coltul stanga sus pentru a-l detasa.
3. Impinge panoul lateral drept spre exterior din coltul dreapta sus pentru a-l scoate.

EN

1. Push the left tempered glass side panel outward from the upper left corner as shown in the image.
2. Push the front tempered glass panel outward from the upper left corner to detach it.
3. Push the right side panel outward from the upper right corner to remove it.

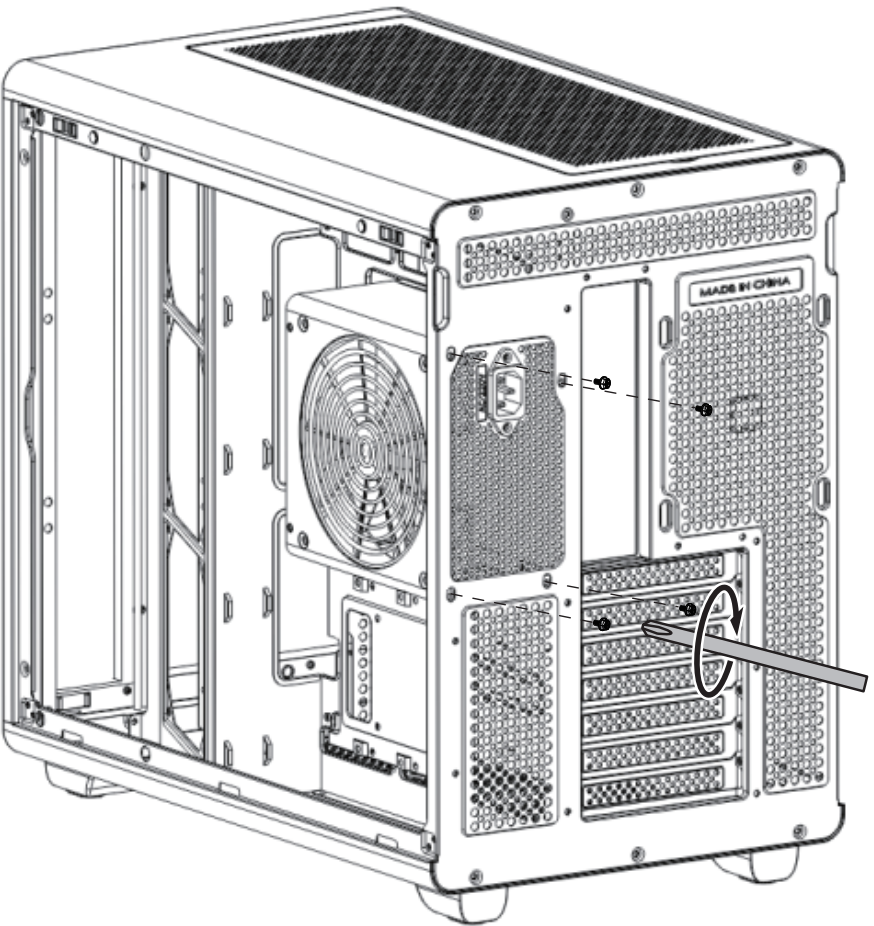B


RO

* Va rugam sa va asigurati ca fantele de aerisire ale sursei si gaurile de prindere pentru suruburi sunt pozitionate corect fata de carcasa.

EN

- Please make sure that the PSU ventilation slots and threaded holes are positioned correctly in relation to the chassis.

C

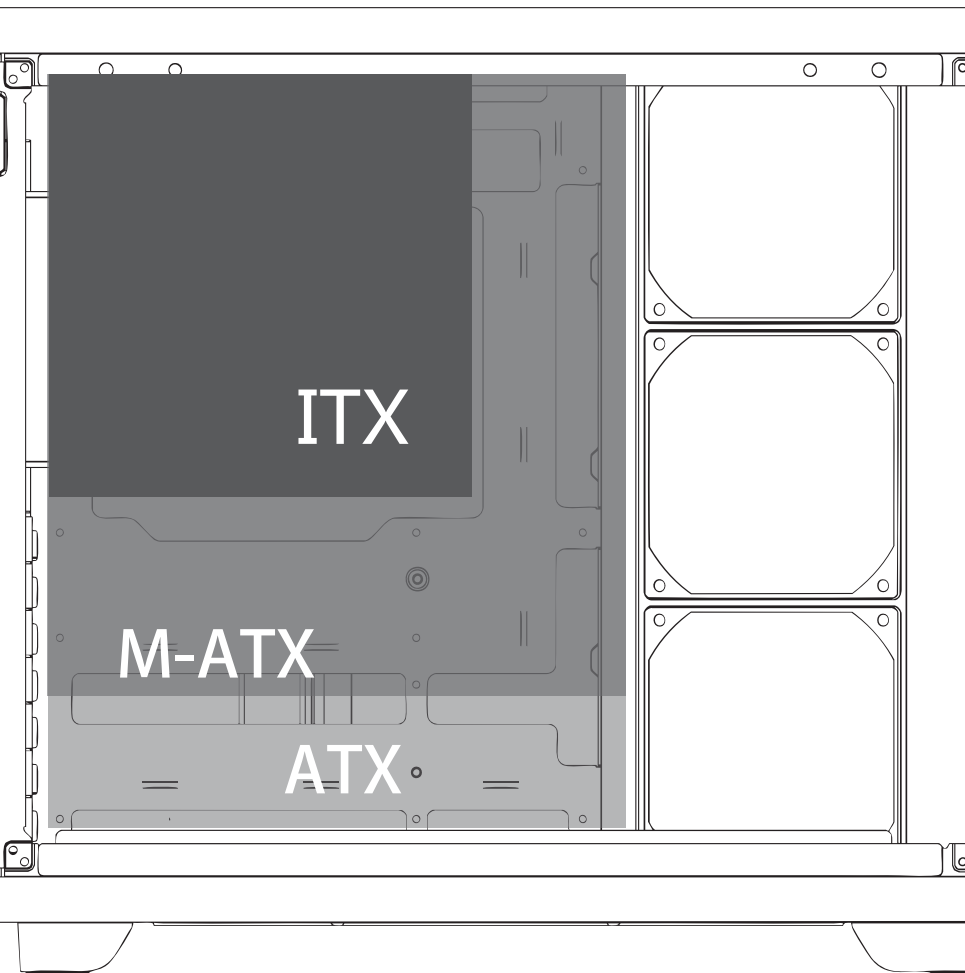[illegible]


RO

Alinați gaurile plăcii de bază cu distanțierele și fixați folosind suruburile Nr.5. Dacă unul din distanțiere lipsește, adăugați un distanțier nou Nr.6.

EN

Align the MB holes with the spacers and secure using the No.5 screws. If one of the spacers is missing, add a new spacer No.6.

D

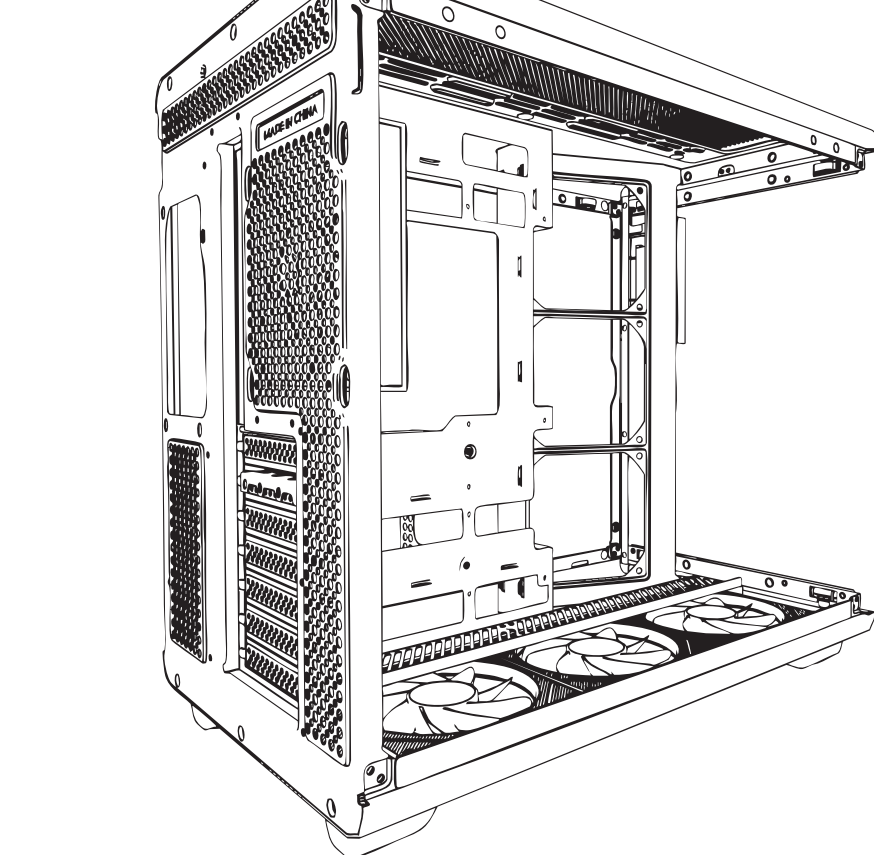

RO

Ventilatoare acceptate (maxim):
 Lateral: 3x 120 mm
 Spate: 1x 120 mm
 Tavan: 3x 120 mm sau 2x 140 mm
 Podea: 3x 120 mm

Nota: Ventilatoarele preinstalate in podeaua carcasei au lamele inversate.

Pentru performante superioare carcasa permite folosirea unui sistem de racire cu lichid, fiind compatibila cu urmatoarele tipuri de radiatoare:

Tavan: 120, 140, 240, 280, 360 mm
Spate: 120 mm

EN


Accepted Fans (maximum):
Side: 3x 120 mm
Rear: 1x 120 mm
Top: 3x 120 mm or 2x 140 mm
Bottom: 3x 120 mm

Note: The pre-installed fans on the bottom of the case have inverted blades.

For superior performance, the use of a liquid cooling system compatible with the following types of radiators:

Top: 120, 140, 240, 280, 360 mm
Rear: 120 mm

--	--	--

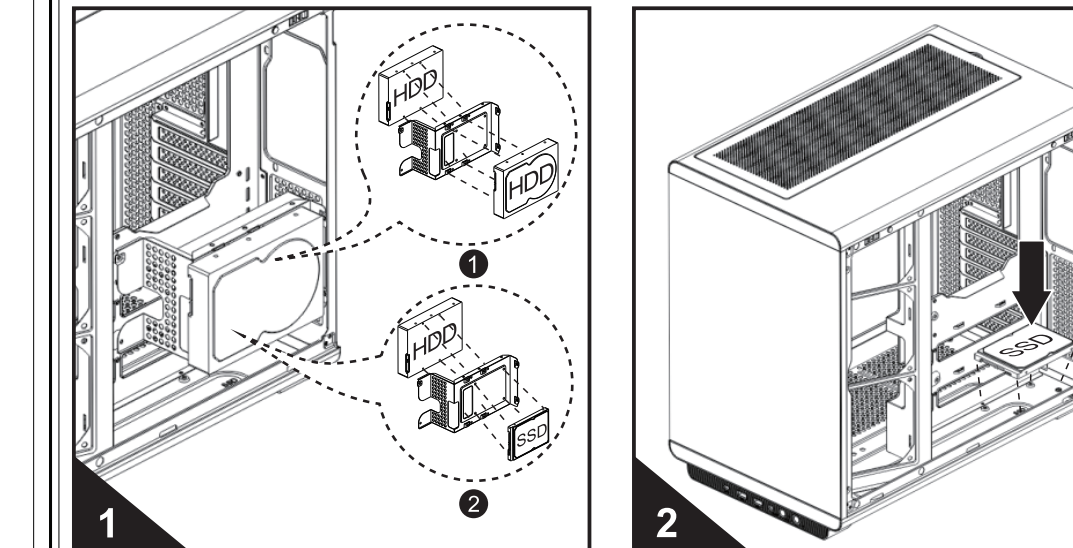

11

1. Scoate suportul HDD/SSD din carcasa.
2. Monteaza fie doua HDD-uri de 3.5", fie un HDD de 3.5" si un SSD de 2.5" pe suport.
3. Reinstaleaza suportul in sloturile din panoul de jos si fixeaza-l cu suruburi in punctele marcate "a".
4. Poti instala si un SSD de 2.5" suplimentar direct pe panoul de jos, fixat cu surub de dedesubt.


Atentie: SSD-ul trebuie instalat inainte de

11

1. Remove the HDD/SSD bracket from the case.
2. Mount either two 3.5" HDDs or one 3.5" HDD and one 2.5" SSD onto the bracket.
3. Reinstall the bracket into the bottom panel slots and secure it with screws at the "a" positions.
4. You can also install an additional 2.5" SSD directly on the bottom panel and secure it with screws from underneath.

Caution: SSD must be installed before the

--	--

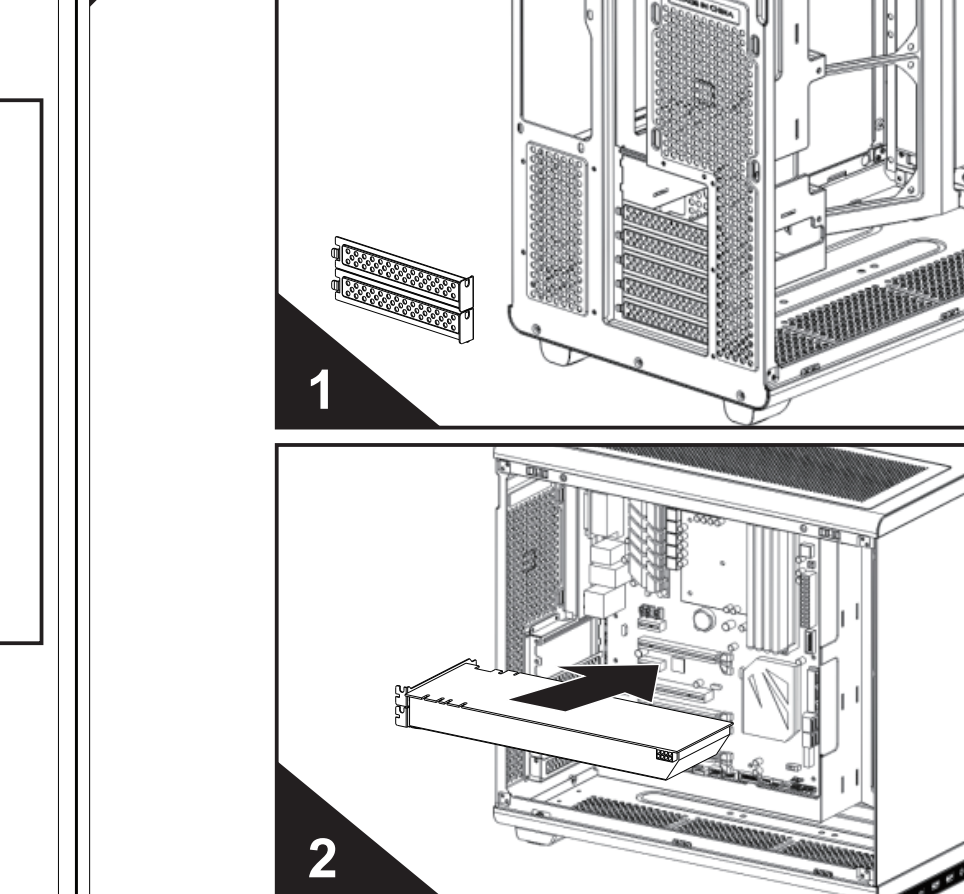

ri

Pentru instalarea standard (orizontala) a placii video, se incepe prin indepartarea barei de fixare a sloturilor PCI, desfacand suruburile din partea din spate a carcasei. Apoi, se introduce placa video in slotul PCIe al placii de baza, conform directiei de inserare, si se fixeaza cu suruburi in zona din spate pentru o prindere stabila, asa cum este ilustrat in imagine.

[illegible]

For standard (horizontal) GPU installation, start by removing the PCI slot cover bar by unscrewing it from the back of the case. Then insert the graphics card into the PCIe slot on the motherboard, following the correct orientation, and secure it with screws at the rear of the case, as shown in the illustration.

